

HOW TO PLAYAWAY - BUTTON FUNCTIONALITY

1 EQ/Equalizer:

Each press on the EQ button rotates a new EQ mode.

- NONE = No EQ setting
- LOUD = Overall sound is boosted
- LOW = Bass is boosted
- HIGH = Treble is boosted
- CLEAR = High end sound is amplified
- HIFI = Sound is mixed for best performance

2 Power:

- a. Press the POWER button once to turn unit on
- b. Press the POWER button again and hold for 3 seconds to power off - release button after unit counts down and "OFF" appears on the LCD screen

3 Speed (Audiobook Content):

- a. Each press of the SP button rotates to a new speed mode. There are 3 options:
 - SPD = Normal
 - SPD+ = Fast
 - SPD++ = Fastest

Shuffle Play (Music Content):

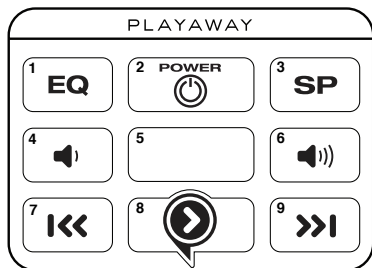
- a. If your Playaway is pre-loaded with music content, the SP button enables/disables shuffle play functionality
- b. Pressing the SP button once will enable Shuffle Play mode and cause a randomization of playback

4 Volume Down:

- a. Each press of the Volume Down button will decrease the volume one level
- b. Press and HOLD Volume Down to accelerate volume decrease

5 LCD Screen:

- a. Displays the operating status of the Playaway
- b. Battery level indicated by icon
 - = Full battery
 - = Replace battery

**6 Volume Up:**

- a. Each press of the Volume Up button will increase the volume one level.
- b. Press and HOLD Volume Up to accelerate volume increase

7 Reverse:

- a. Press the Reverse button once to reverse one chapter/track ("track" refers to music content)
- b. Press and hold the Reverse button to fast rewind

8 Play/Pause:

- a. Press the button once to Play
- b. When in play mode, press the button again to Pause playing or resume Play

9 Forward:

- a. Press the Forward button once to advance one chapter/track ("track" refers to music content)
- b. Press and hold the Forward button to fast forward

PLAYAWAY INFORMATION

Need assistance or additional info?

Visit us online at www.playawaydigital.co.uk.

Or call us at (877) 893-0808.

➤ Please keep this card for reference